


---

SINGLE SIDED TACKBOARD  
WALL MOUNTING INSTRUCTIONS

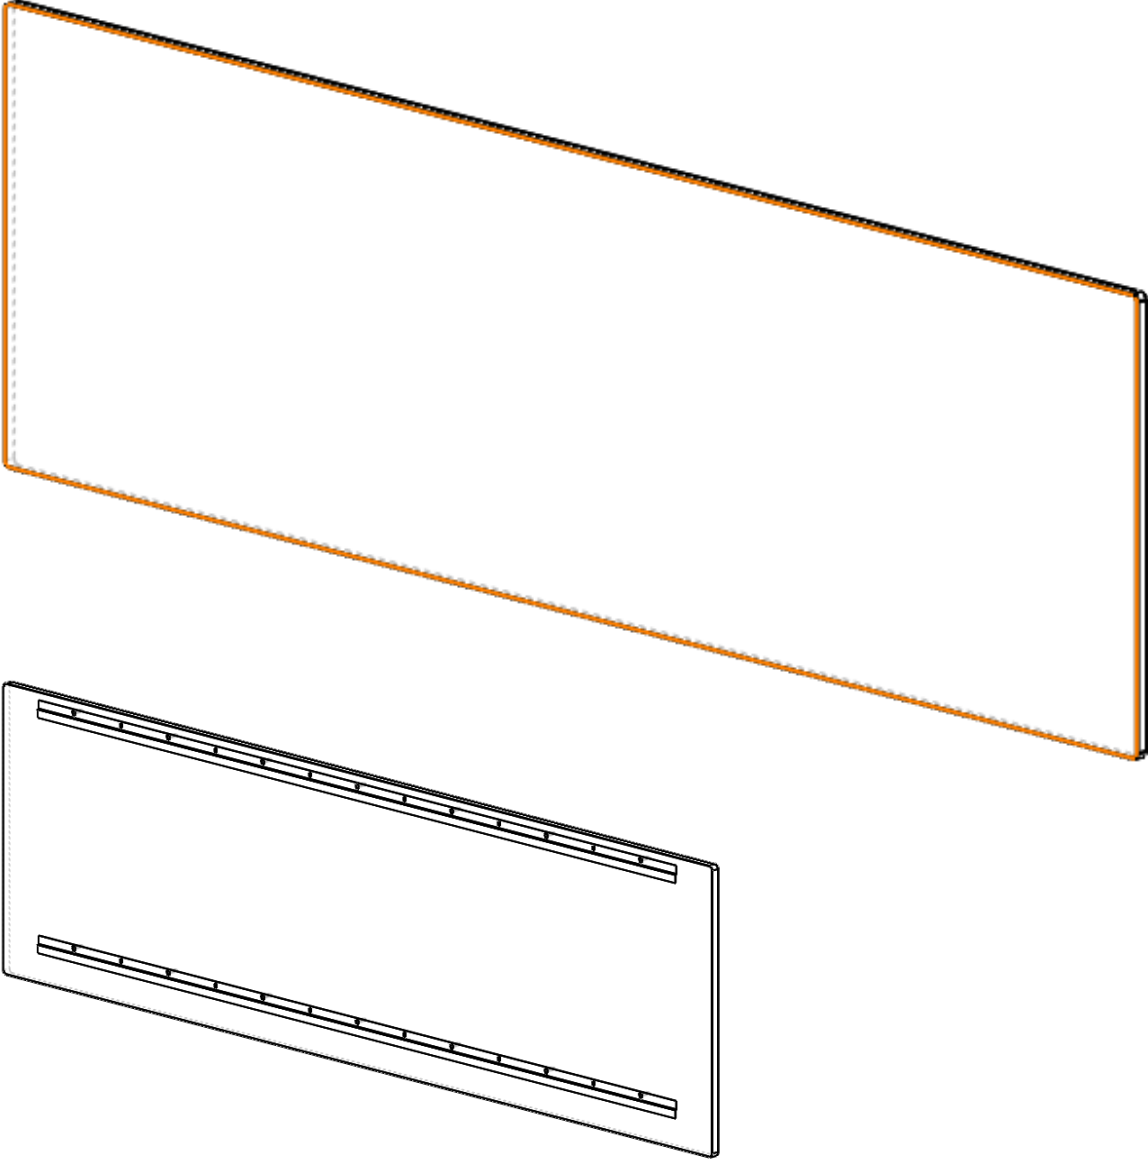


# INSTALLATION INSTRUCTIONS

Materials Included:


1. Z-Clip, temporarily screwed on the backside of the tackboard
2. Screws, #8 X 1-1/2" L (or longer to reach studs - Provided by Installer)

**Unscrew the mating Z-Clips (Temporarily affixed to Tackboard). Leave the Top Z-Clips in-place.**

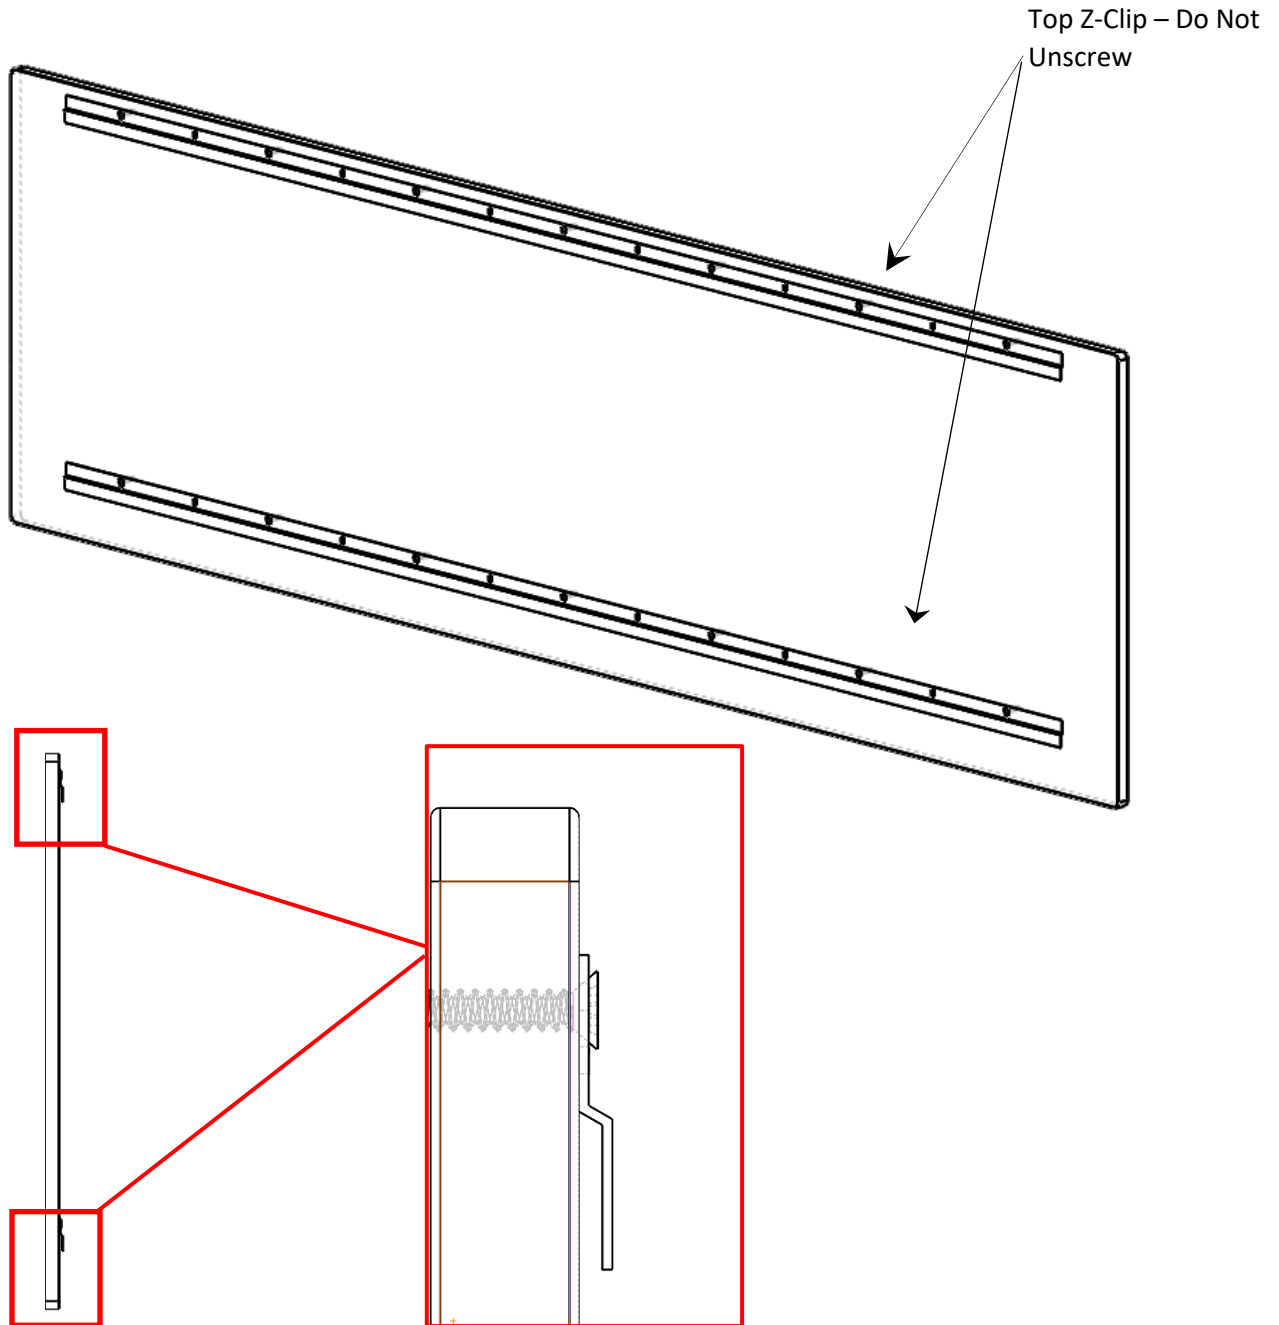


## INSTALLATION INSTRUCTIONS

- 2 Mark a line representing the Top and Bottom of the Tackboard onto the wall where Tackboard will be mounted. Then mark another line, 2-1/8" below the top of Tackboard. And another line 1-3/8" above the bottom of the Tackboard.

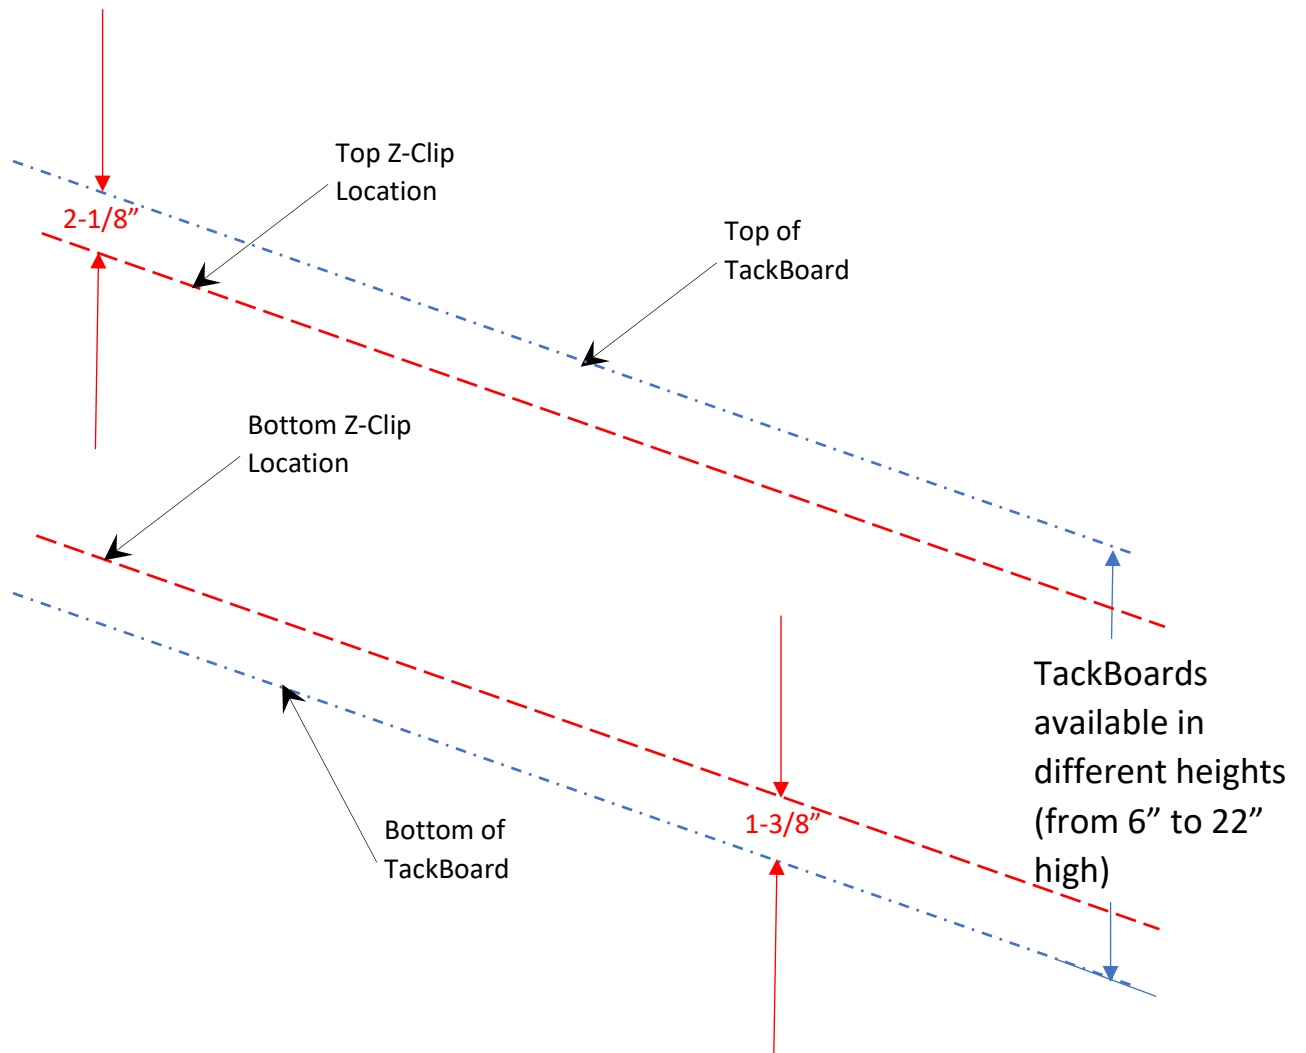

# INSTALLATION INSTRUCTIONS

3 Using the marked lines, align the bottom of the z-clips. Screw Z-Clip onto wall.

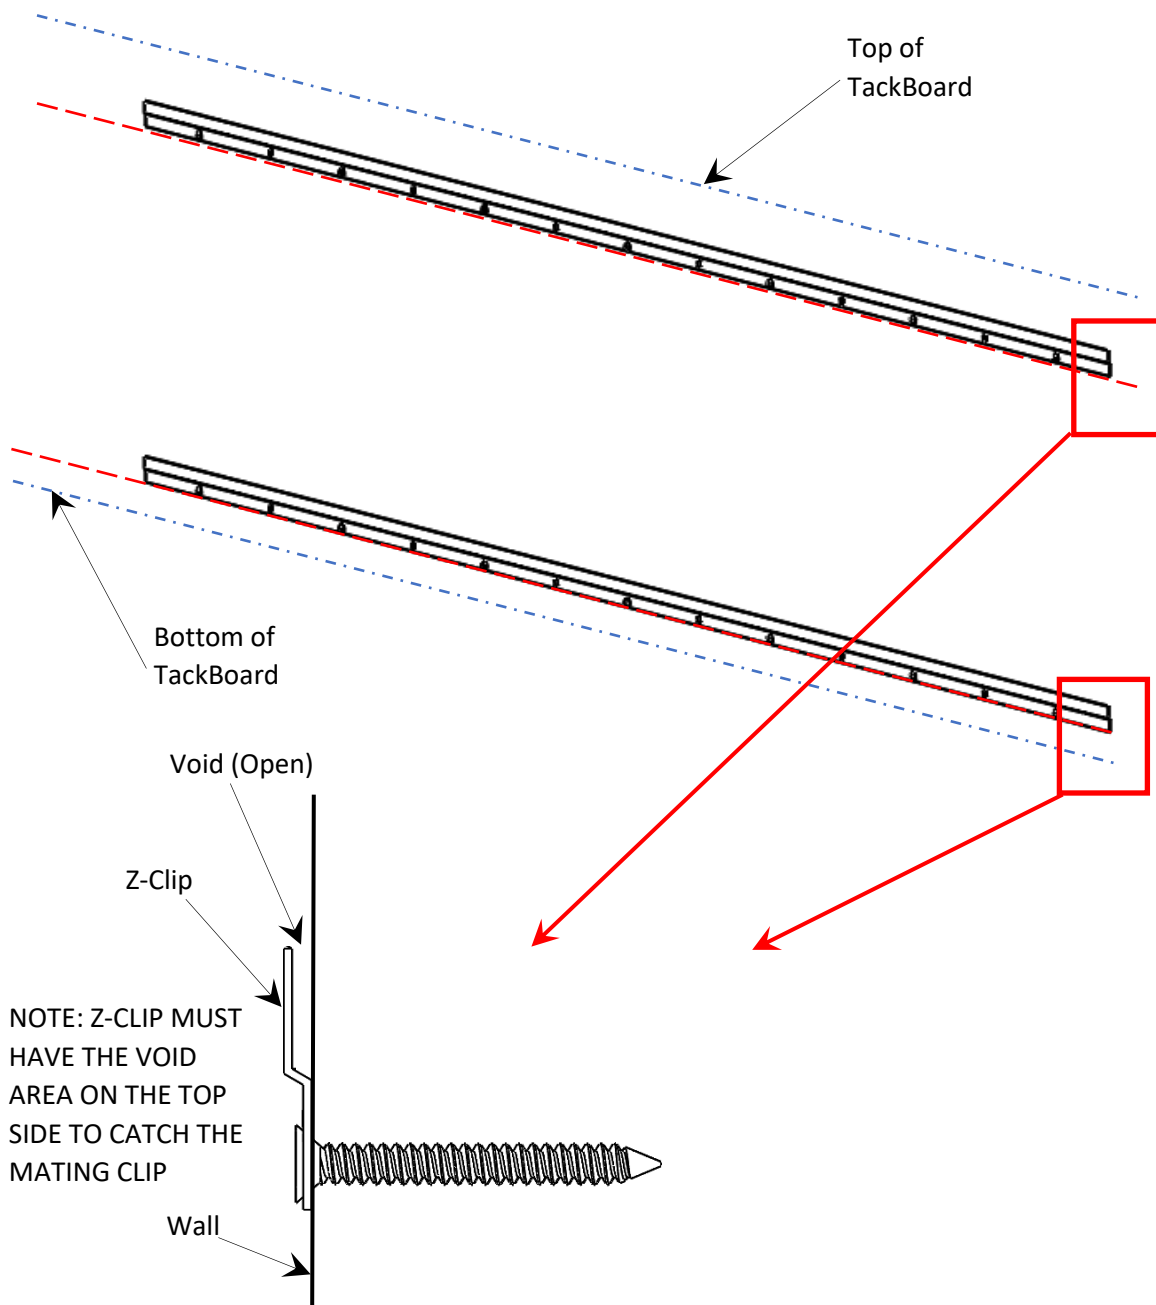

---

## INSTALLATION INSTRUCTIONS

- 4 Mount by sliding Tackboard down and mating the clips together.

