
Avalon Storage Tables

Installation Instructions

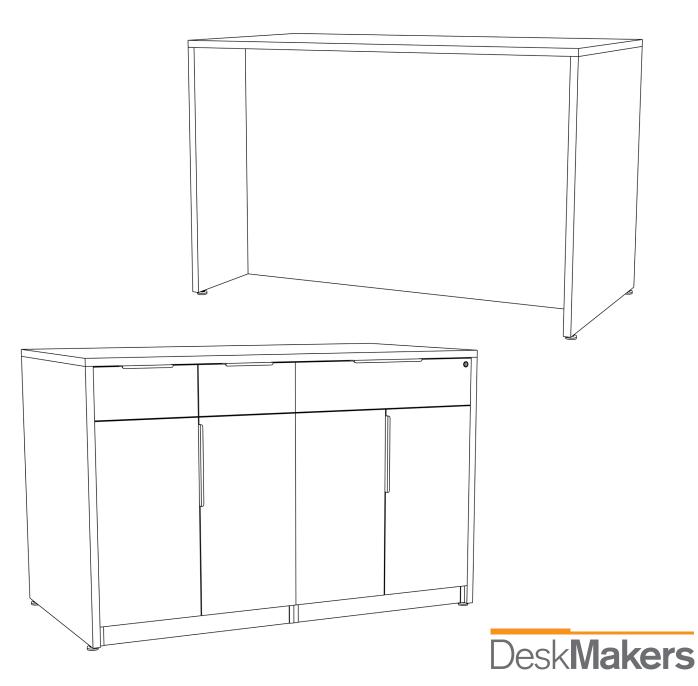




Avalon Single Sided Tables




Avalon Installation Instructions

(1)

Start by laying the table top on a padded surface, pre-drilled side facing up. There will be pre-drilled holes on the inside of the end panels and table top for the L-Brackets that support the modesty panel. The modesty will not be predrilled. Install the end panels to the table top via the cam bolts, then attach the modesty in between to hold the table square. The L-Brackets should face into the larger section of the table.

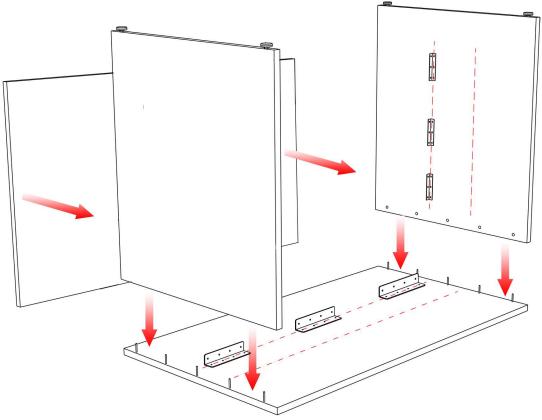


Roll the table right side up as shown, not by turning it over an end panel. Check that the table is level and all panels are square and tight once it has been positioned upright.

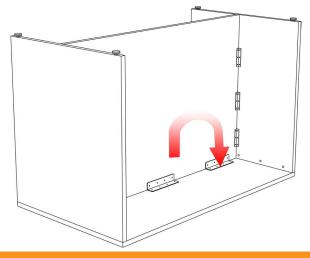




3


Level and align storage units separately of table. The glides will allow up to 1/2" of adjustment.

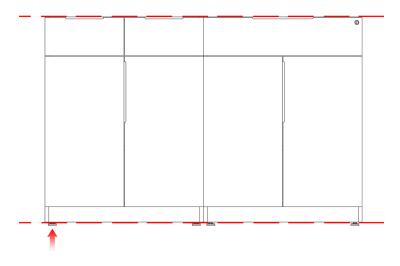


Slide storage into table frame. The face of the unit should be flush with the front edge of the table. There will be 5" of space between the back of the storage units and the modesty. Storage units should be secured by screwing them into the frame from the inside of the storage unit using standard wood screws between 1" and 1 1/2" in length.

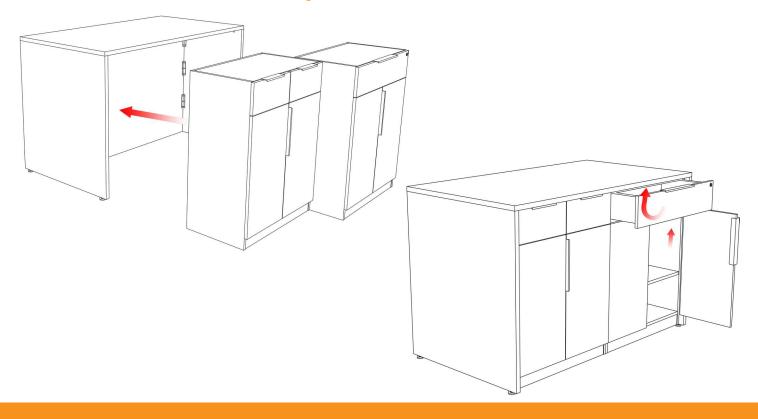


Avalon Double Sided Tables

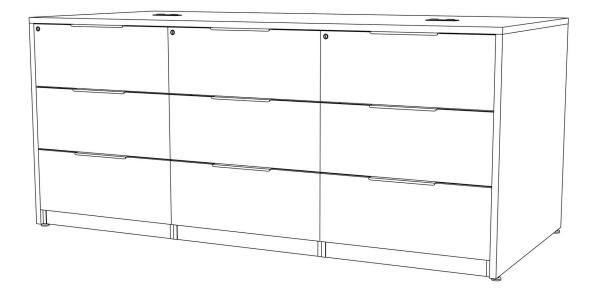

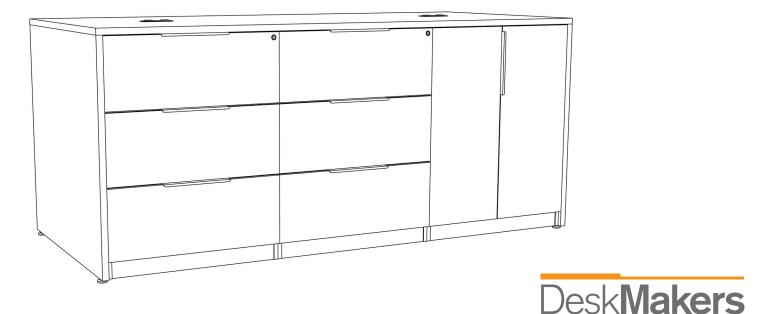


Avalon Installation Instructions

Attach the top of the table to the end panels using the cam bolts. This can be done upside down on the floor using a protected surface, or by using one or more storage components to support the top from the center. Level the table before the storage is permanently installed.

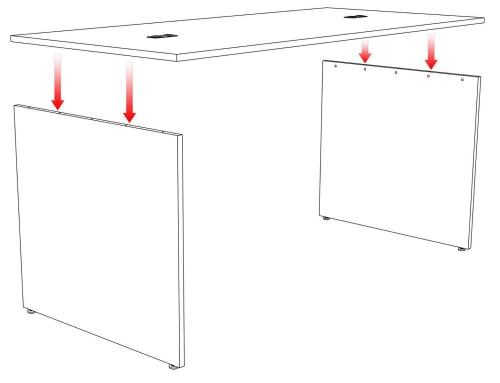


Level and align storage units separately of table. The glides will allow up to 1/2" of adjustment.

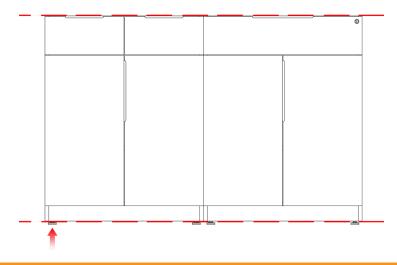


Avalon Installation Instructions



Insert storage into the table frame. The face of the storage unit should be flush to the front edge of the table. The backs of the storage units may not touch depending on size selected. If there is an electrical cut-out in one of the storage units be sure to position it to allow access to the floor core. Storage units should be secured by screwing them into the frame from the inside of the storage unit using standard wood screws between 1" and 1 1/2" in length.

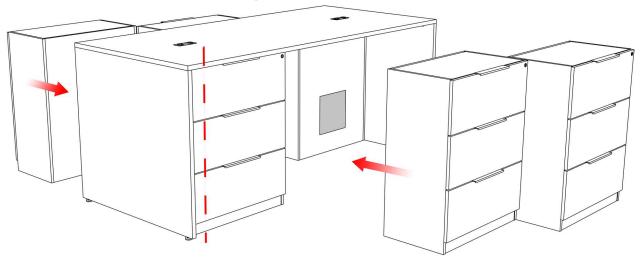

Avalon U-Channel & Partial Width Strechers

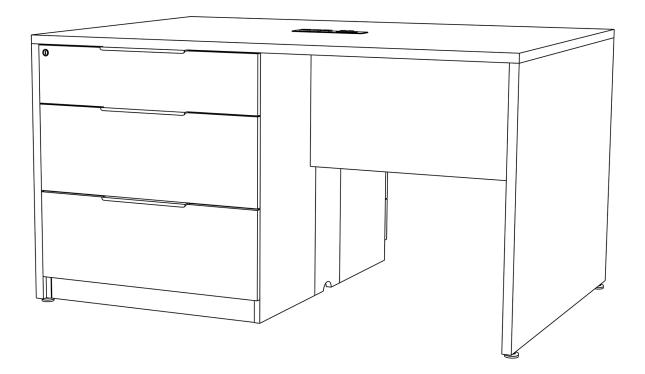






(1)

Assemble the table according to the instructions in the last section, leaving the portion of the table occupied by the strecher open. Install wire channel first. If the storage is installed flush to the front edge of the table, the U-Channel will fit perfectly in between.

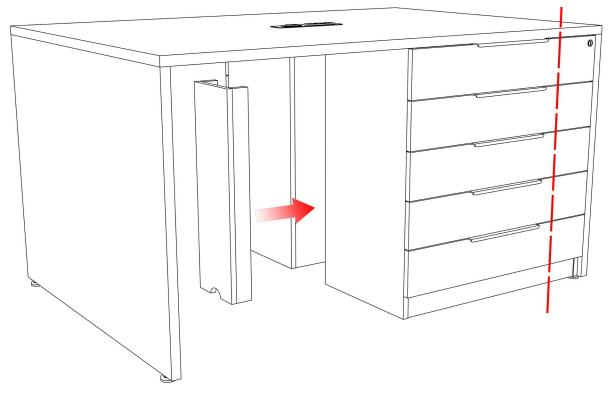


Attach side of the U-Channel to back of storage units using 1" to 1 1/4" wood screws. The front of the U-Channel will attach by dowels so that it can be pulled free to allow for wire access.



Avalon Installation Instructions

3

Strechers are secured using L-Brackets. There will be pre-drilled holes on the underside of the table top and the inside of the end panels. The stretcher panel and the storage will not be pre-drilled. Partial width stretchers will connect as shown to the side of a storage unit and should be the last part of the table installed.

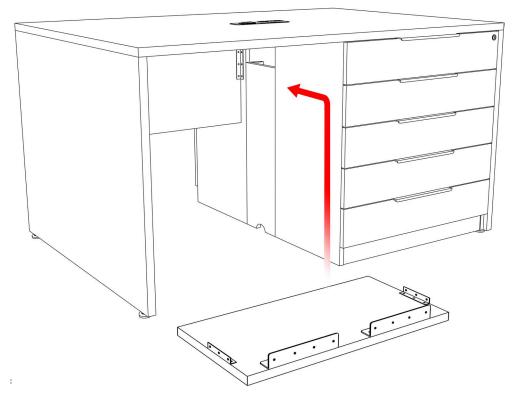


Avalon ADA Add-on








ADA Add-on can only be installed on an Avalon Table of the same grade and width. The primary table should be completely assembled first. The end panel of the add-on unit can be leveled against the primary table.

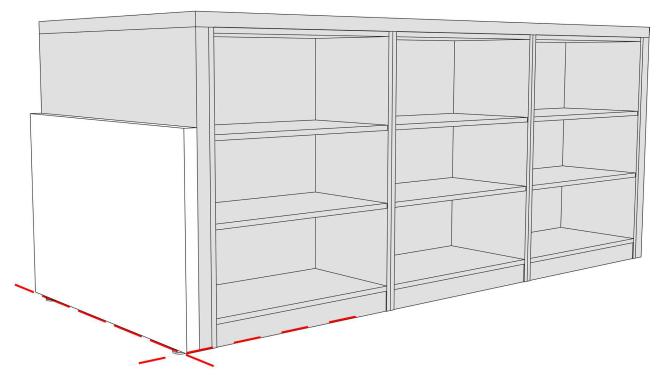

(2)

Assemble the L-shaped add-on counter using the L-Brackets provided. L-Brackets should also be attached to the leading edge of the counter where it will connect to the primary table.

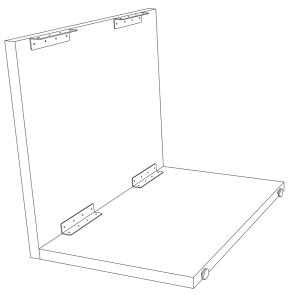





Attach counter to primary table via L-Brackets, using wood screws no longer than 1".

