

# Ribbon Casegoods


## Installation Instructions



**DeskMakers**  
Be Enabled

# Ribbon Casegoods



Installation Instructions - Secure Worksurfaces to Storage Pedestals

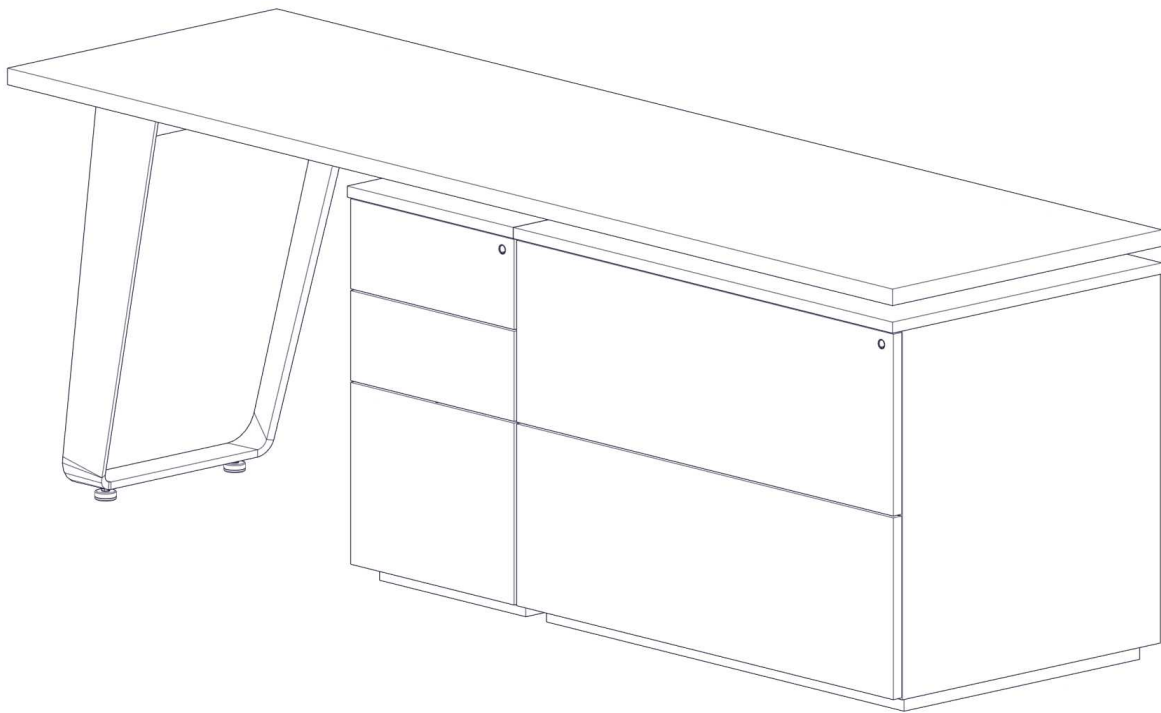

**DeskMakers**  
Be Enabled

## Ribbon Installation Instructions

- 1 Position Ribbon leg 5" inset from worksurface edge to top plate. Secure leg to worksurface with provided screws.

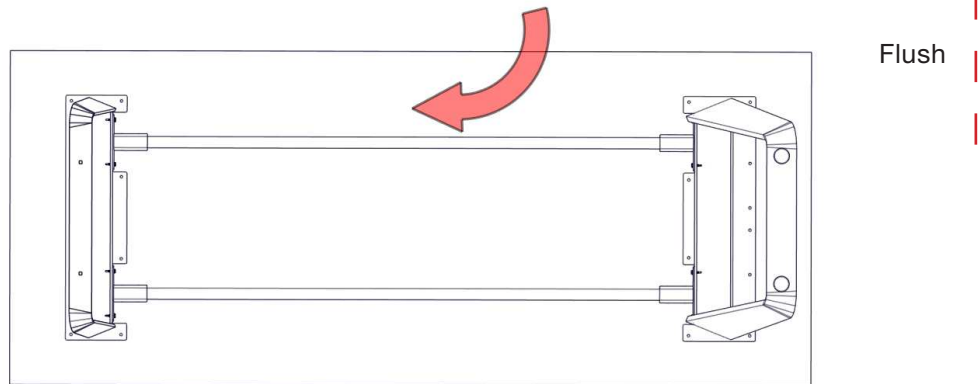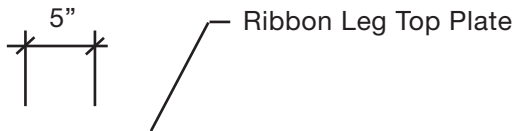


- 2 Rest worksurface assembly above storage units so that the edge of the worksurface is flush to the outside edge of the storage unit.
- 3 Pull out and remove top drawers from storage units.

## Ribbon Installation Instructions

4

From the underside of storage unit, locate screw positions (at least 6" inset from all edges).

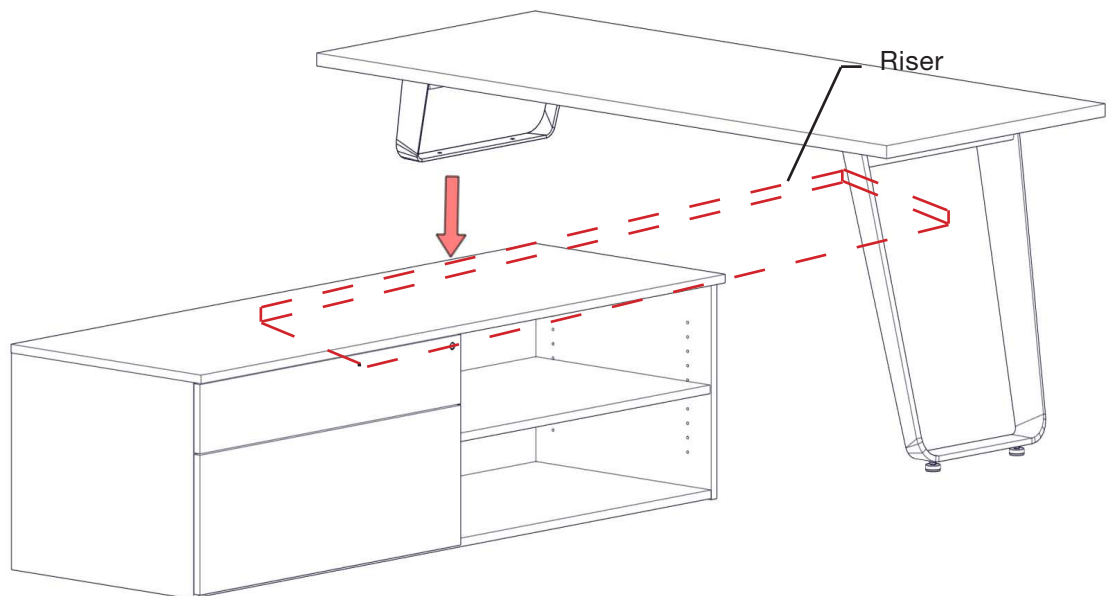


5

Secure storage units to worksurface assembly with the provided screws.

# Ribbon Casegoods

Installation Instructions - Secure Ribbon Leg to Storage Units

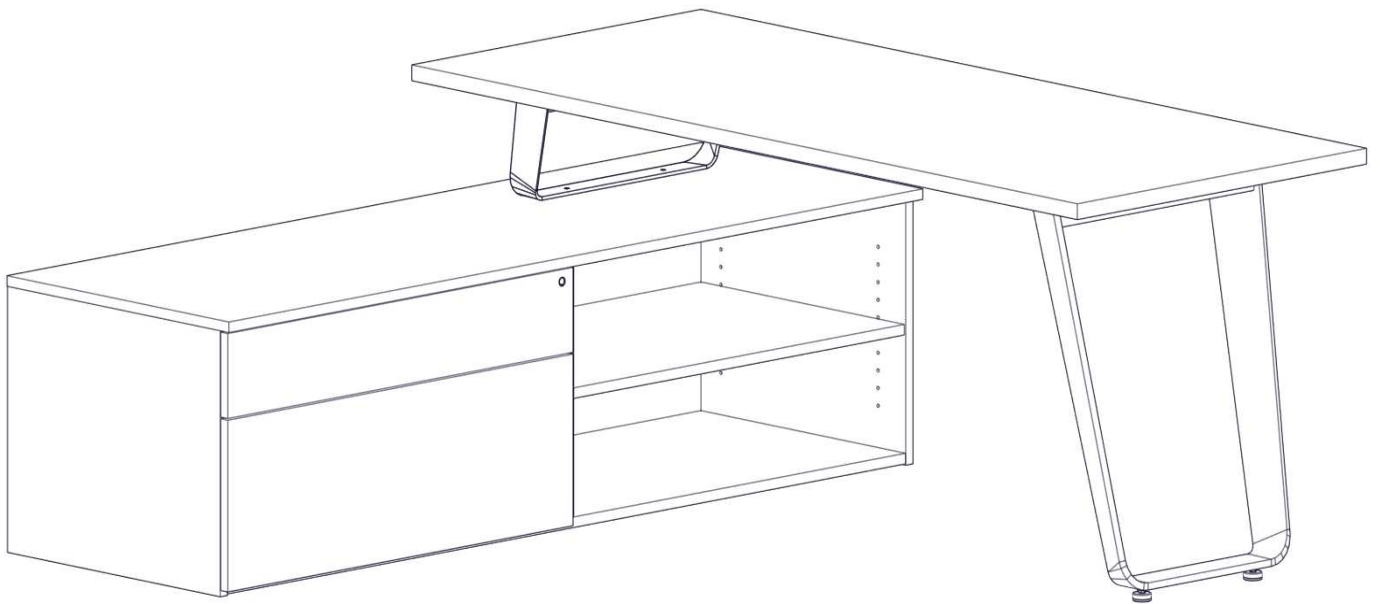


**DeskMakers**  
Be Enabled

## Ribbon Installation Instructions


1

Lay worksurface upside down on padded floor. Locate Large Ribbon Leg (LRL) and position leg to be inset 5" from edge of worksurface to edge of top plate. Secure LRL to worksurface with the provided screws. Slide in Spanning Rods into U-channels and fasten. Locate Small Ribbon Leg (SRL) and slide into position. Secure SRL and Spanning Rods to worksurface with the provided screws.

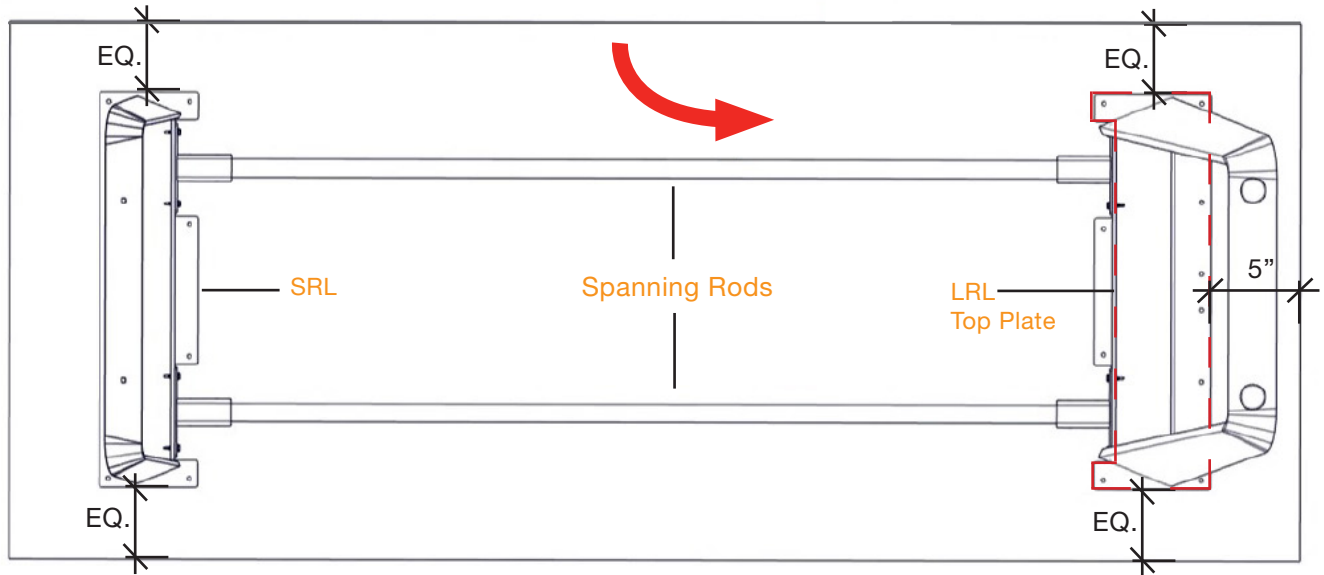


2

Flip Worksurface Assembly and rest above storage unit. Assure that outside edge of worksurface is FLUSH to the back edge of storage unit.

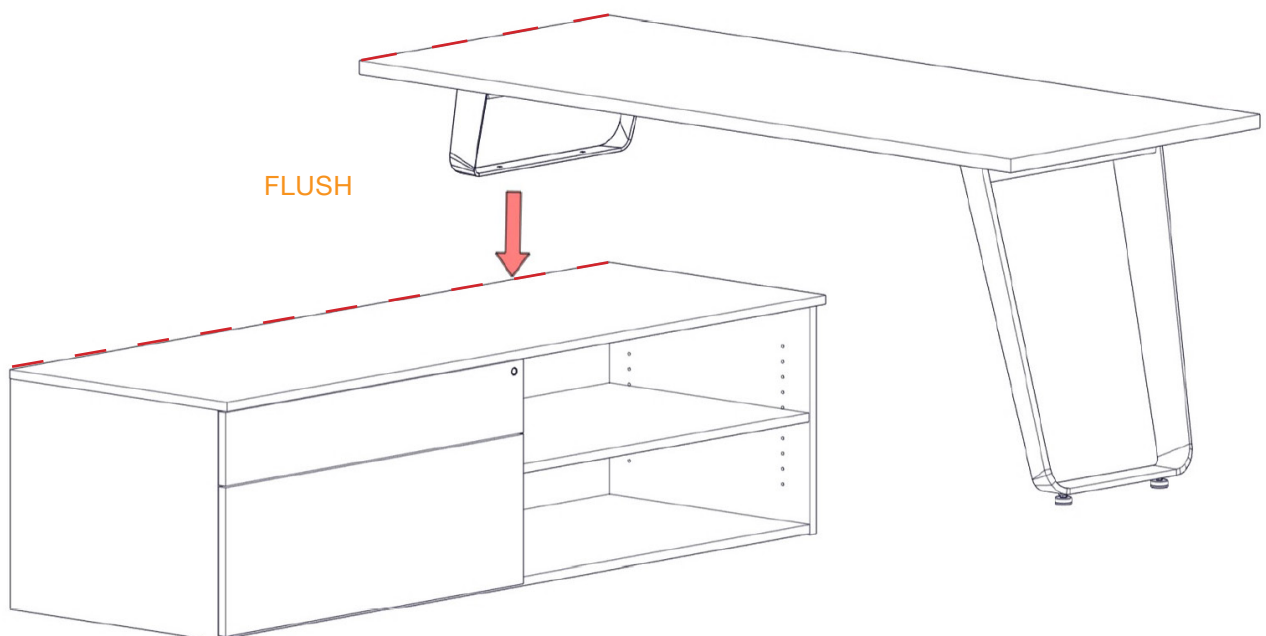

## Ribbon Installation Instructions


- ③ Once in place, mark hole locations onto storage unit and drill holes using a 5/16" diameter wood bit.

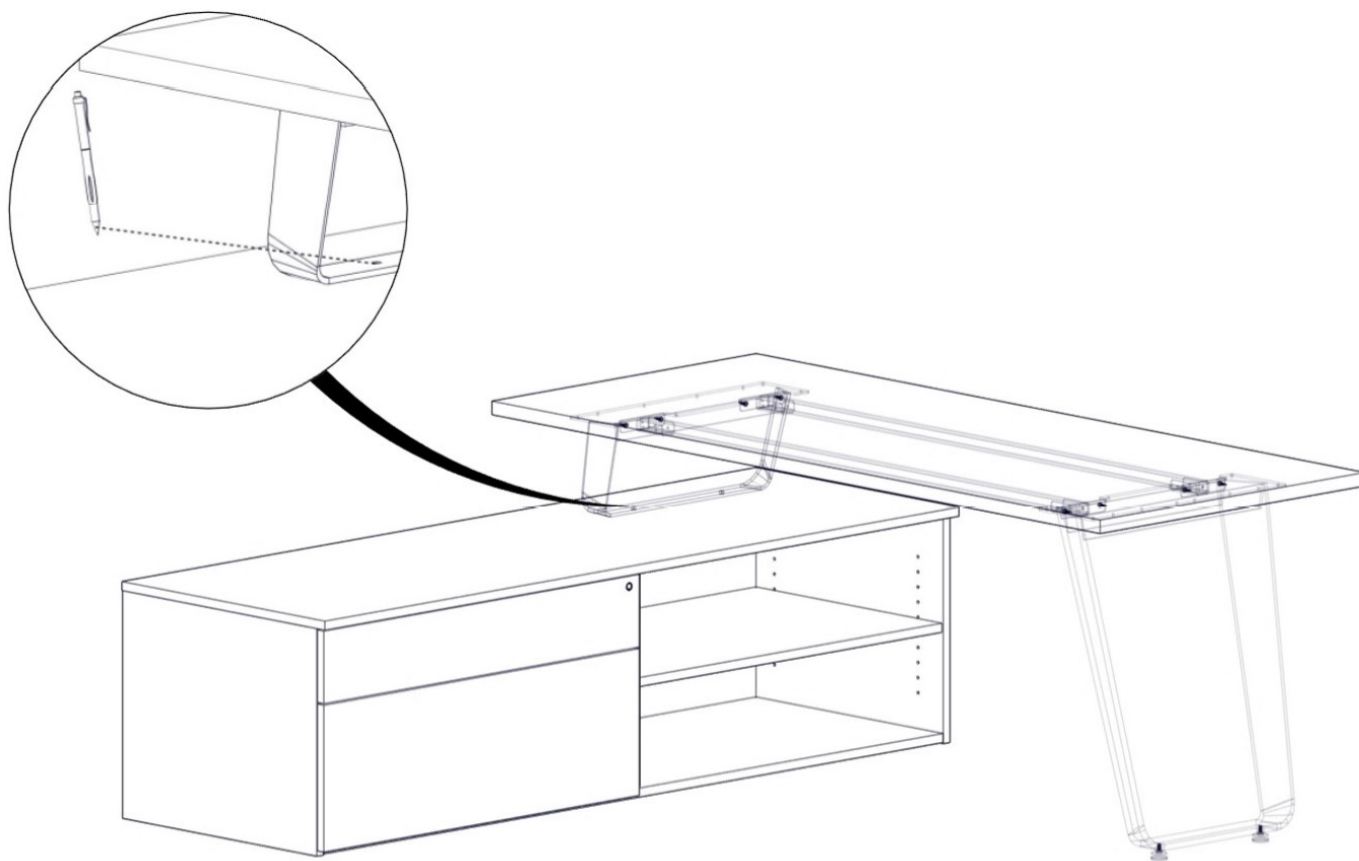



## Ribbon Installation Instructions


- ④ Drop in the (2) provided 1-1/4" L bolts and fasten with provided nuts from underside of storage top.

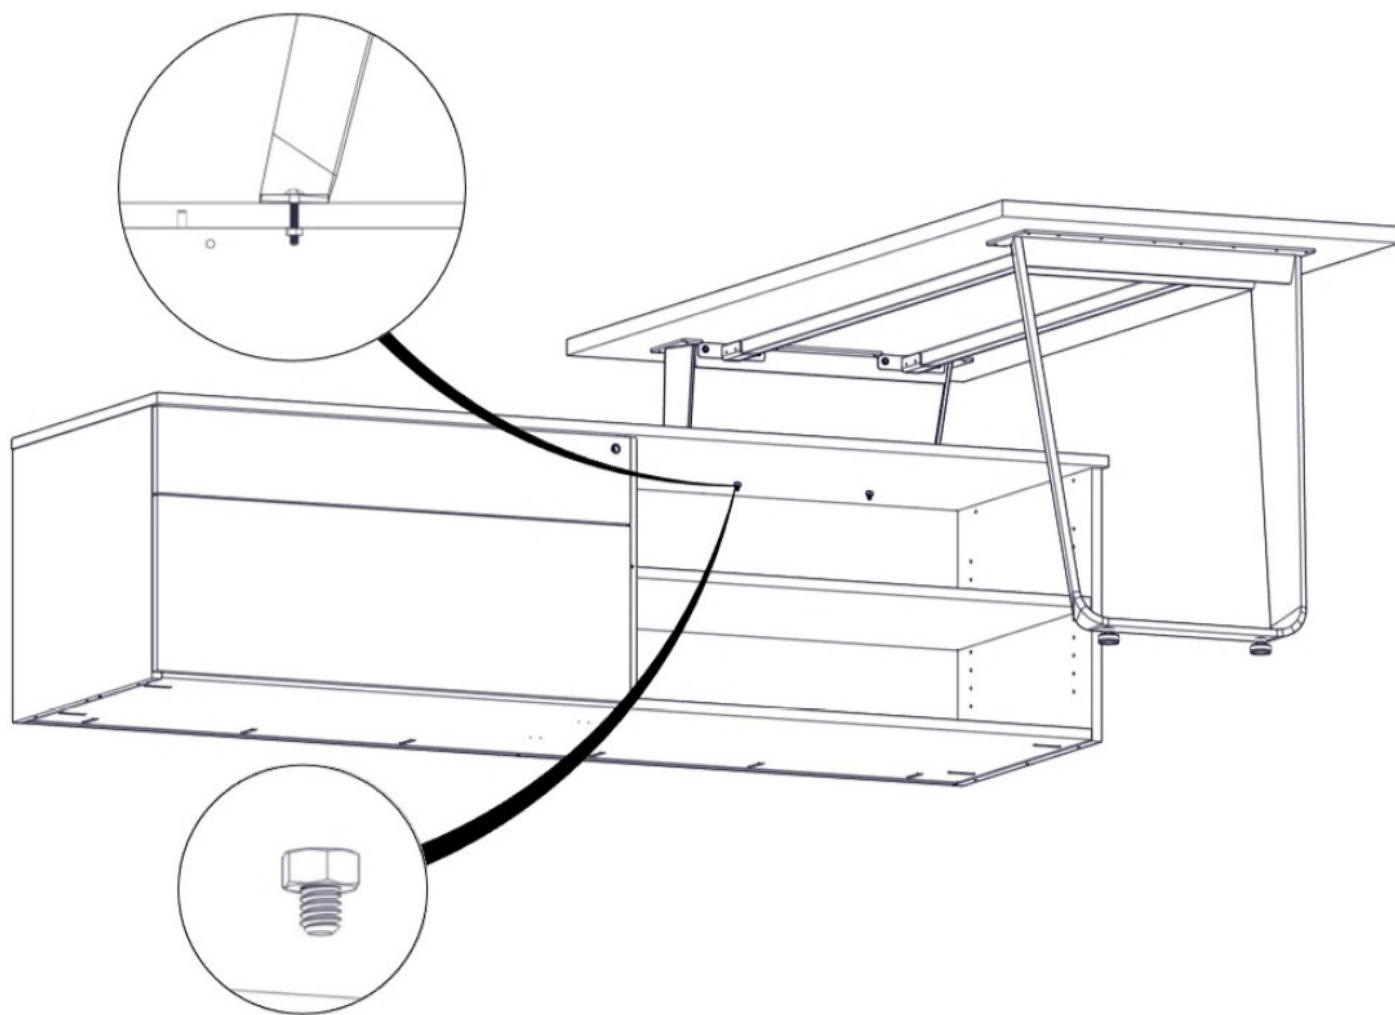



# Ribbon Casegoods


Installation Instructions - Secure Ribbon Top Riser to Storage

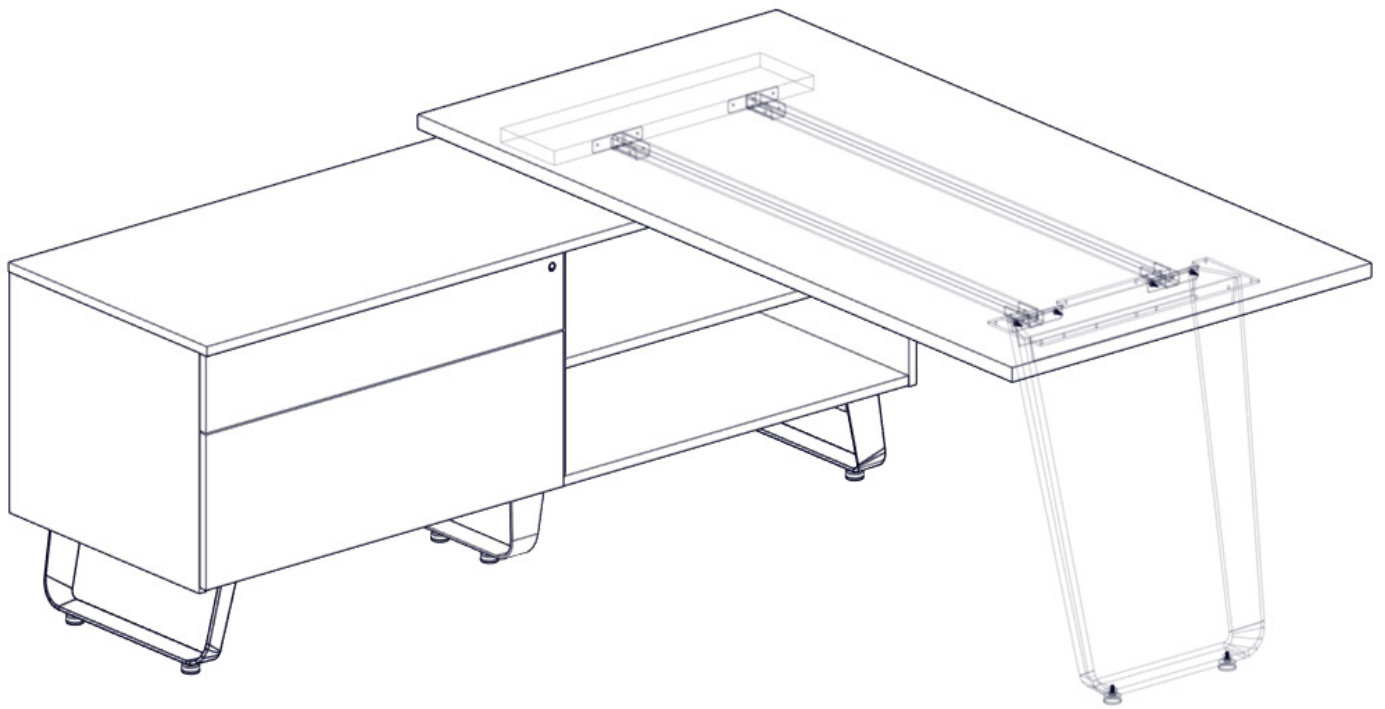


**DeskMakers**  
Be Enabled

## Ribbon Installation Instructions

- 1 Lay worksurface upside down on padded floor. Slide in Spanning Rods into Pre-Installed Ribbon Riser U-channels and fasten. Locate Large Ribbon Leg (LRL) and position leg to be inset 5" from edge of worksurface to edge of top plate. Secure LRL to worksurface with the provided screws.

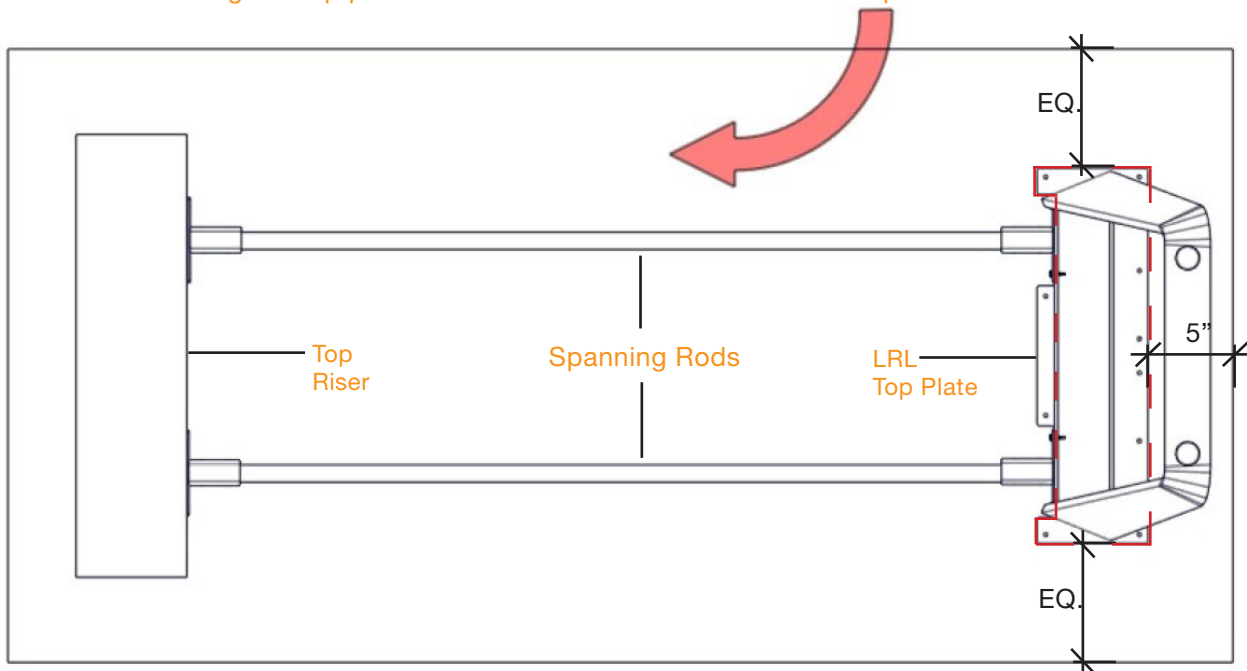

- 2 Flip Worksurface Assembly and rest above storage unit. Assure that outside edge of worksurface is FLUSH to the back edge of storage unit.

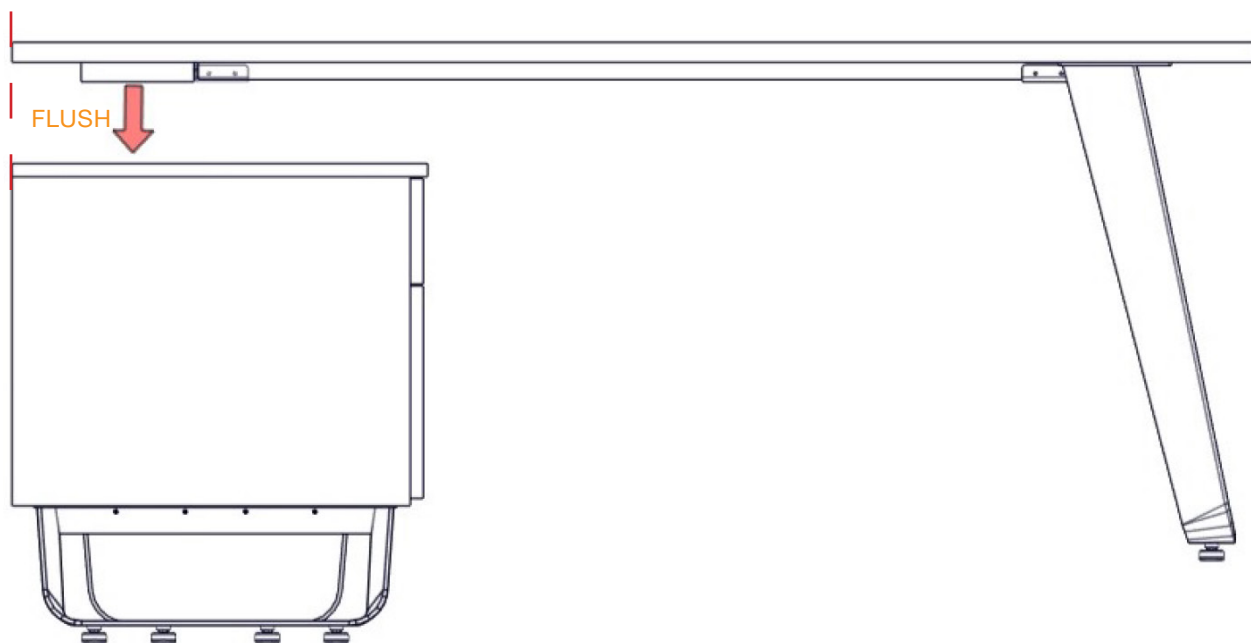

## Ribbon Installation Instructions

- 3 Secure Worksurface Assembly to Storage by drilling from the underside of storage top into the Ribbon Riser with the provided screws.

